



GRAFFITI SHIELD^{INC.}

HOLISTIC APPROACH TO GRAFFITI CONTROL

**Metal Shield and Custom Shield
Installation Procedure**

Metal Shield and Custom Shield Installation:

Minimum Tools Needed:

Spray Bottle GST-0022

Film On Slip Solution GST-0019 or GST-0021 or Baby Shampoo

Paper Towels (Lint Free)

Pro Handle Unger with 12" Black Squeegee GST-0004-CMP

Pro Handle Unger with 6" Blue Squeegee GST-0003CMP

Gold Hard Card GST-0015-G

Micro Fiber Towel

Ask about our Metal Shield Tool Kit (Basic). It has the above items and more in a bundle.



Metal Shield and Custom Shield Installation:

Installation of the Metal Shield and Custom Shield is quick and efficient, but does have some steps we recommend for a flawless installation.

- Fill a standard spray bottle with clean filtered water. Or use a 5 gallon sprayer filled with 4 gallons of clean filtered water.
- Add Baby Shampoo, 2 capfuls for a standard spray bottle or 4 oz. per 4 gallons and shake well.
- Inspect panels to be done for any stickers, glue or excessive tags.
- Use 150-220 grit sand paper if tag is very deep or has an edge. Then use 00 Steel Wool and wipe the surface to be coated.
- Spray the surface with soap and water and wipe the surface by using micro fiber cloth or paper towel. Make sure to wipe the top and sides.






Metal Shield and Custom Shield Installation:

- Now spray the panel again completely and use your large cleaning squeegee to remove the solution from side to side from top to bottom.
- Spray the panel again and leave wet.
- Next take your Metal Shield or Custom Shield and remove the release liner and spray the adhesive with the soap and water solution. Make sure to spray all areas to ensure that all adhesive is wet.



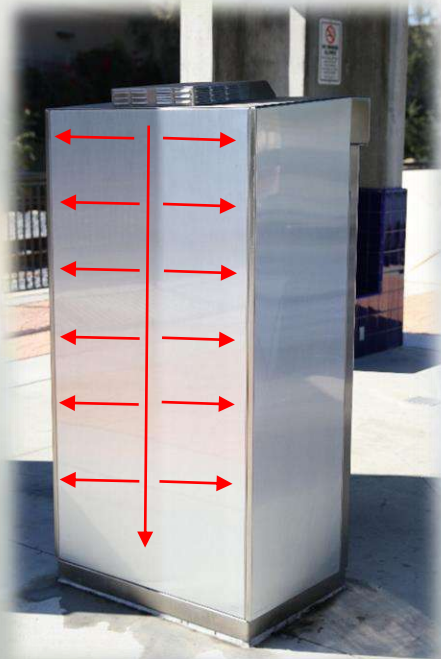

Metal Shield and Custom Shield Installation:

- Carefully place the Metal Shield or Custom Shield on the panel. Move accordingly into place as needed.
- Then spray the panel with the soap and water solution.
- Squeegee Metal Shield or Custom Shield from center out per the arrowed diagram.
- Squeegee film with slow overlapping angled passes.
- Repeat process two times to ensure water is removed.
- Dry edges with gold card wrapped in paper towel.
- Then wipe entire panel with micro fiber towel.



Squeegee At An Angle But Straight As
The Red Arrow Shows